



TREE COMMANDER™

REMOTE CONTROL

(●●) LED blinks **RED** when not connected to machine but has been powered on.

(●●) LED blinks **AMBER** when connected to machine but not yet enabled.

(●●) LED blinks **GREEN** when connected to machine and has been enabled.



Low Battery Indicator blinks to let you know its time to replace.




Shuts the engine off.




Activates the feed rollers.




Stops the feed rollers.




Press to Reset the Lower Feed Stop Bar and Press and Hold to override the Bar.




Reverses the feed rollers.



ON  **OFF**

Remote On/Off button.

